

Specification Sheet

Operation - The strainer is a vertical Z-plate design to protect cold water meters from the damaging effects of debris and foreign matter. The strainer not only improves the velocity profile of the water being metered, but also minimizes the effects of velocity distortion caused by upstream valves and fittings. Consequently, the meter's accuracy is maximized by the elimination of debris and turbulence.

Construction - The strainer consists of 5 main components; the main case, a removable strainer, a gasket, a removable top cover and stainless steel bolts. The 1 1/2" - 6" main case and top plate are bronze and come with a removable drain plug. The 8" - 12" main case and top plate are epoxy coated steel. The plate strainer is 304 stainless steel with a z-configuration to assure an effective open area more than 2 times greater than the water meter case size it precedes. The main case and top cover are assembled with a gasket and stainless steel bolts.

Installation - The strainer must be installed upstream from the meter it is protecting. It is recommended that the strainer be installed with the removable top plate vertically accessible for flushing and maintenance.

Materials

1 1/2" - 6" Main Case	Bronze
1 1/2" - 6" Top Plate	Bronze
8" - 12" Main Case	Coated Plate Steel
8" - 12" Top Plate	Coated Plate Steel
Strainer Plate	304 Stainless Steel
Top Plate Gasket	Rubber
Top Plate Bolts	Stainless Steel

Strainers Sizes: 1 1/2" - 12"



Description

Applications - Strainers are designed for use in potable cold water up to 120°F with working pressures not to exceed 150 psi. Used in conjunction with Infinity turbine and compound meters will extend the life of the measuring element and as a result maximize revenue.

Maintenance - The Z-strainer can be removed, cleaned or replaced without removing the main case from the service line. In order to remove the Z-strainer, the main case must be isolated from line pressure. After depressurizing, simply loosen and remove the bolts, lift the top plate cover and gasket from the main case, and remove the strainer. Proper maintenance should include a regular flushing program. Loosen the top cover bolts to allow internal pressure to lift the full-face gasket and top plate for flushing, without isolating the strainer from line pressure. Simply tighten the top cover to reset the top plate.

Connections - Standard 1 1/2" and 2" strainers have 2-bolt oval flanged end connections. The 3" strainer has 4-bolt round flanged end connections. The 4" - 8" have 8-bolts round flanged end connections, and the 10" and 12" have 12-bolt round flanged end connections. All end connections are fully compatible to ANSI B 16.1 Class 125 flanges.

Infinity Metering Company, Inc.




Specifications

Size	1 1/2" - 2"	3"	4"	6"	8"	10"	12"
No. of Flange Bolt Holes	2	4	8	8	8	12	12
No. of Top Plate Bolts	6	8	8	10	18	20	24
Optional Drain Plug (In.)	1/2	3/4	3/4	3/4	3/4	1	1
Operating Pressure psi	150	150	150	150	150	150	150
Operating Temperature °F	120	120	120	120	120	120	120

Dimensions & Net Weights

Size/Ends	A	B	C	D	E	Weight (lbs)
1 1/2" Oval	5	5 7/16	2 1/8	5 13/16	5 5/8	9.75
2" Oval	7	5 1/4	2 1/8	5 13/16	6	11.50
3" Round	6	7 3/4	3 9/16	6 7/8	7 1/2	24.75
4" Round	7 1/2	8 13/16	4 3/16	8 1/16	9	39.75
6" Round	9	11	5 1/4	11 1/8	11	65.50
8" Round	9	13 1/2	6 1/2	13	13 1/2	66.00
10" Round	10	17	8 1/2	14 1/2	17	105.00
12" Round	12	19	9 1/2	17	19	132.00

Meets or exceeds latest revision of AWWA C701 and C702 Material and Design Standards

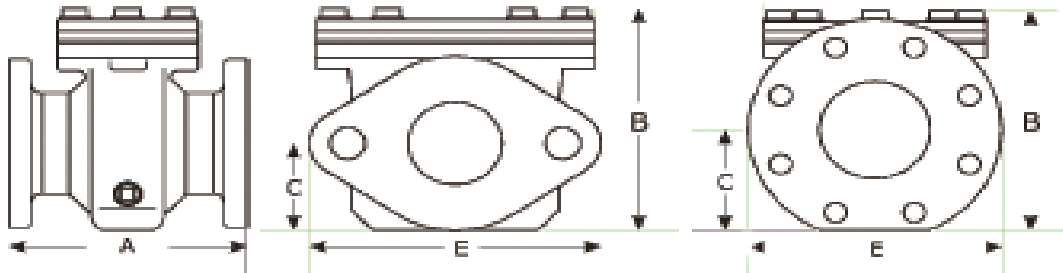

Infinity Metering Company, Inc.

PO Box 948
 Claremore, OK 74018
 918-342-2752 or 888-342-2752
 FAX: 918-342-5949

Physical Address:
 21052 South 4175 Rd.
 Claremore, OK 74019

info@imcmeter.com
 www.imcmeter.com

Due to continuous research and product enhancements, Infinity Metering Company, Inc. reserves the right to change product or system specifications without notice, except to the extent an outstanding contractual obligation exists.

SZU030408